


**Flip Windshield
for Honda Pioneer 1000**

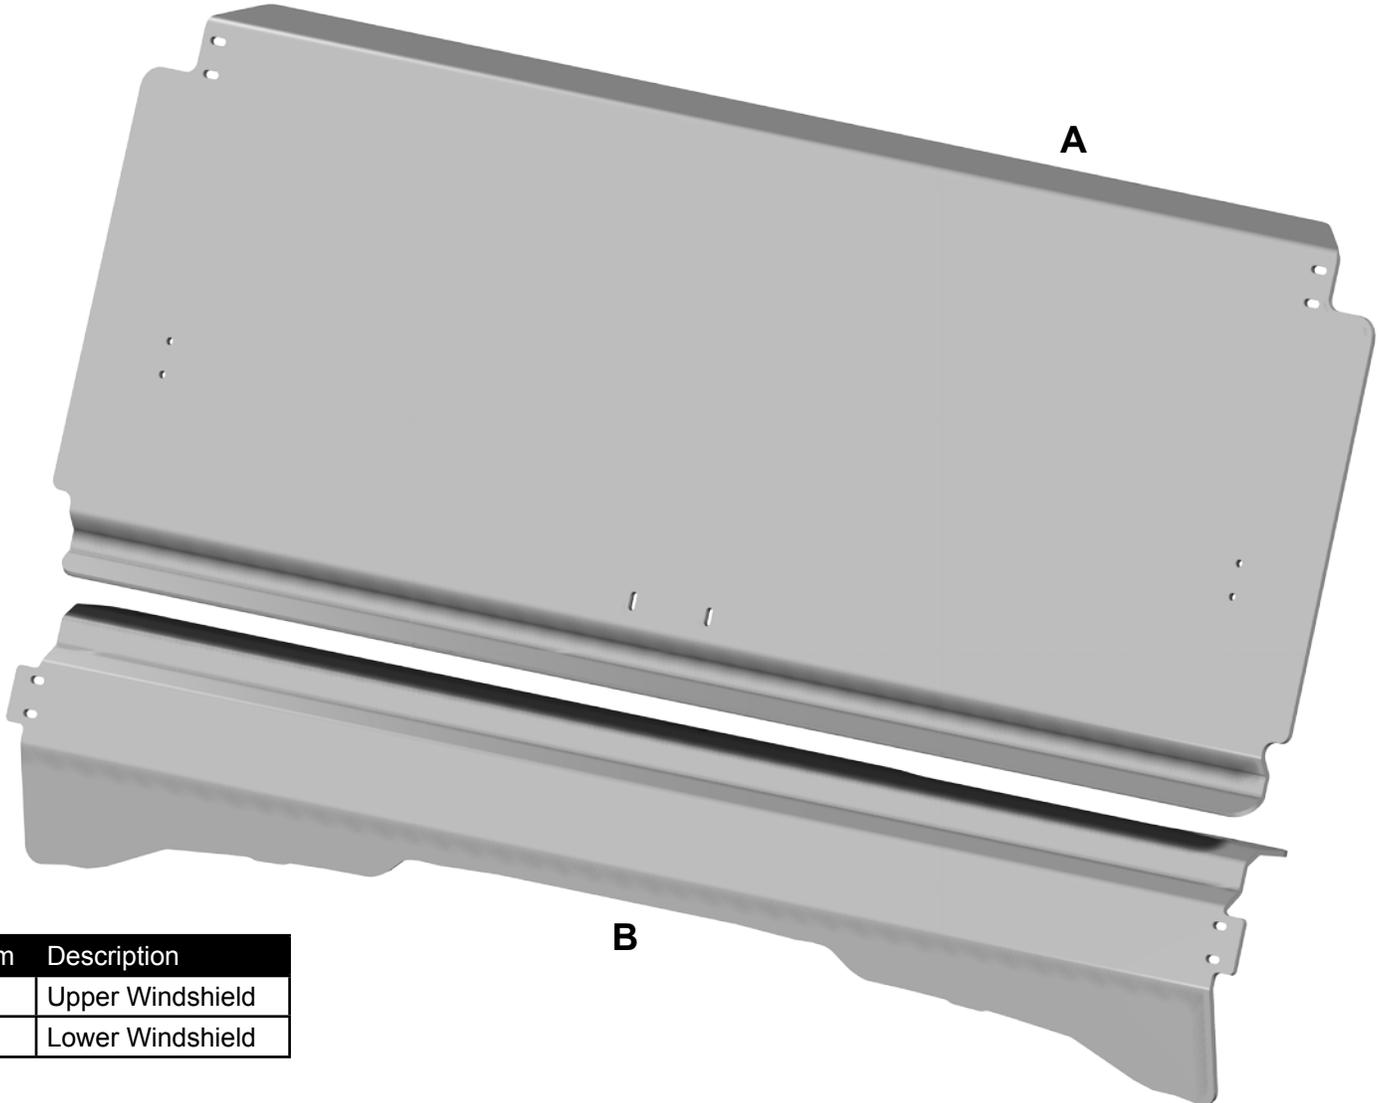

Item	Description
A	Upper Windshield
B	Lower Windshield

If applicable Roof does not need to be removed when installing Windshield.

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You

For Choosing



Liability Statement


SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.





By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.


Use hand tools only when assembling.

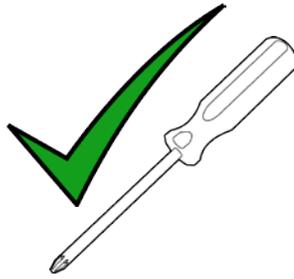

Do not use power tools.

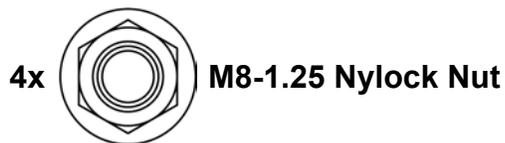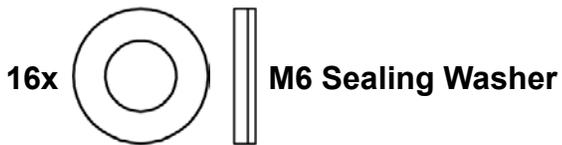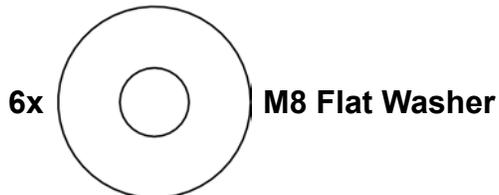 

(kit contents continued)

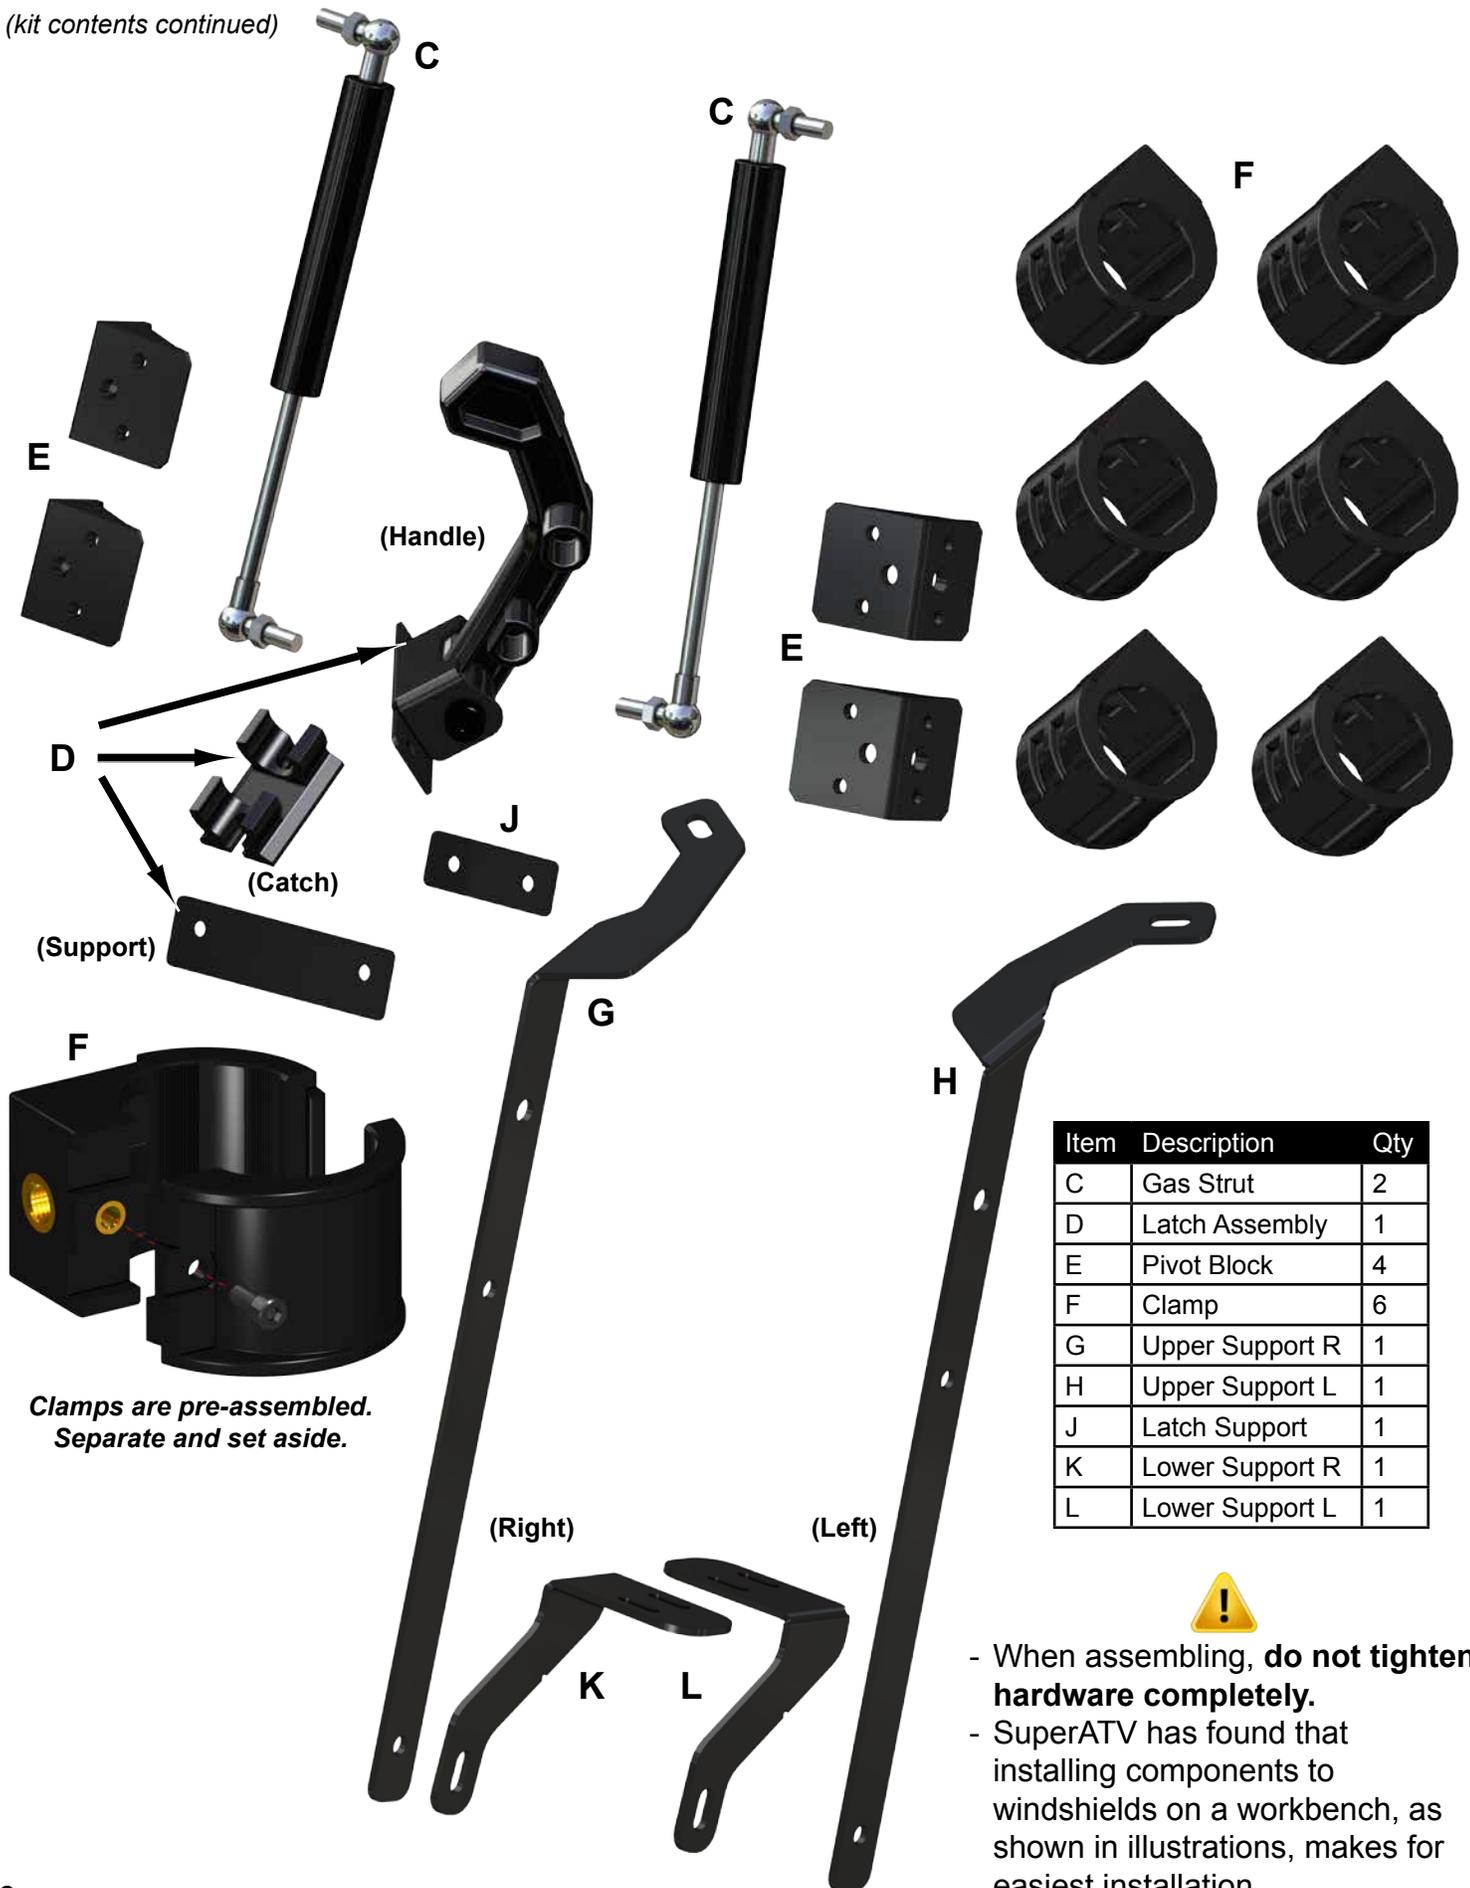


Item	Description	Qty
C	Gas Strut	2
D	Latch Assembly	1
E	Pivot Block	4
F	Clamp	6
G	Upper Support R	1
H	Upper Support L	1
J	Latch Support	1
K	Lower Support R	1
L	Lower Support L	1




- When assembling, **do not tighten hardware completely.**
- SuperATV has found that installing components to windshields on a workbench, as shown in illustrations, makes for easiest installation.

Lower Windshield (B)


- Install provided Seal to Lower Windshield (B).

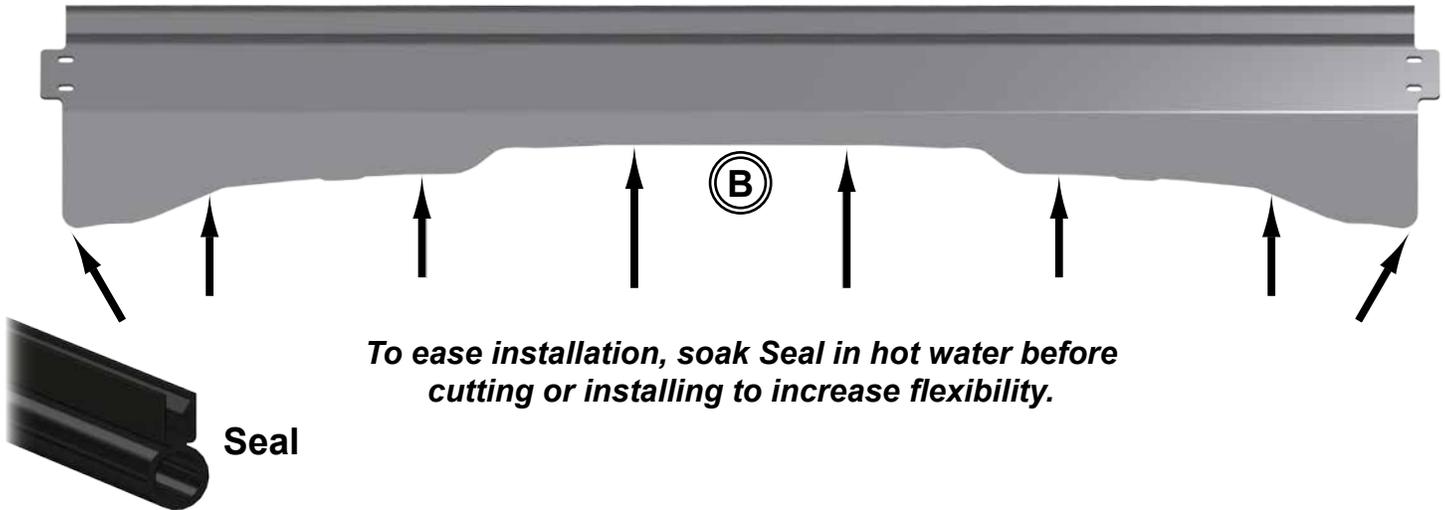


- Install Catch, part of Latch Assembly (D), to Lower Windshield (B); place Latch Support (J) on bottom section of Lower Windshield (B) and secure with hardware shown.

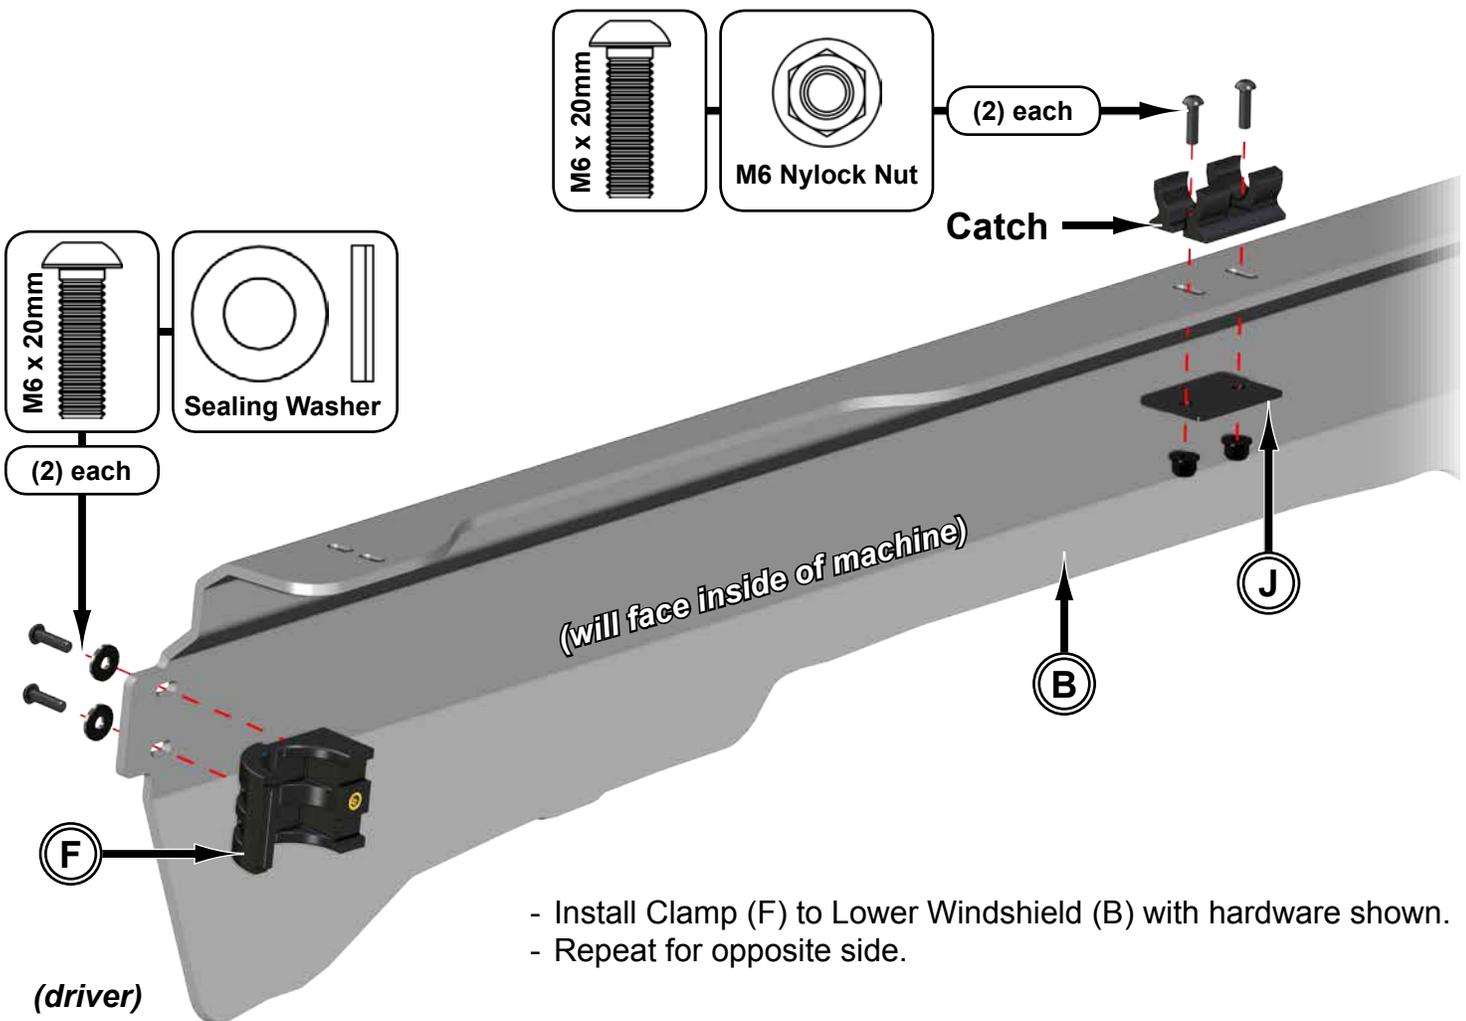

- Install Lower Support R (K) to Lower Windshield (B) and Clamp (F) with hardware shown.
- Repeat for opposite side.

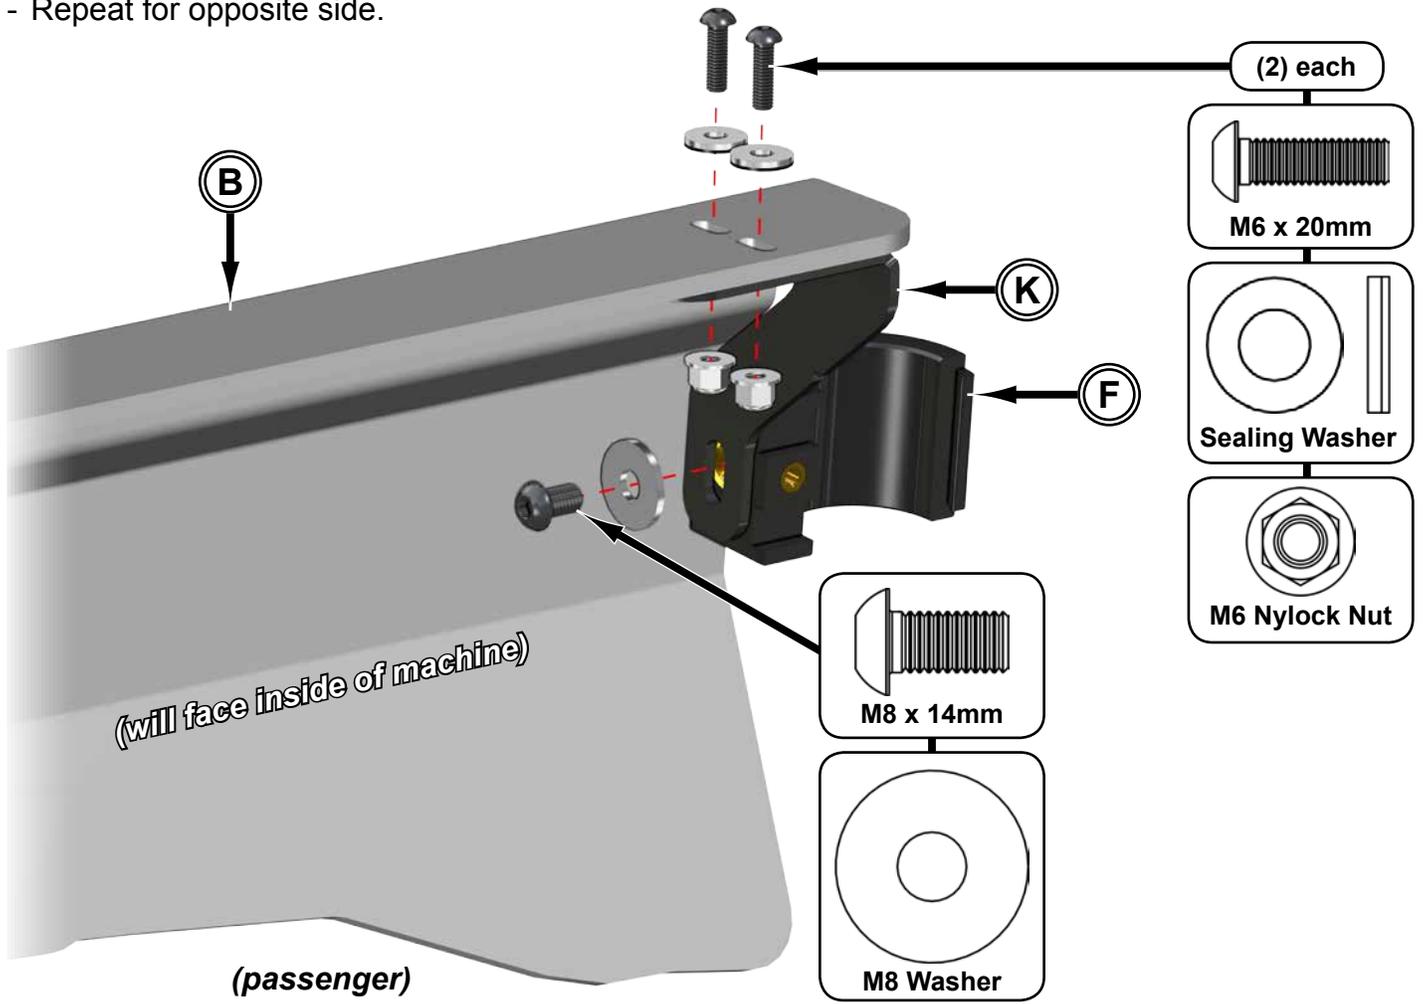


- Install Lower Windshield (B) assembly to Cage.
- Secure Clamps (F) with hardware provided with Clamps (F).
- Install provided Gasket to Lower Windshield (B) as shown.

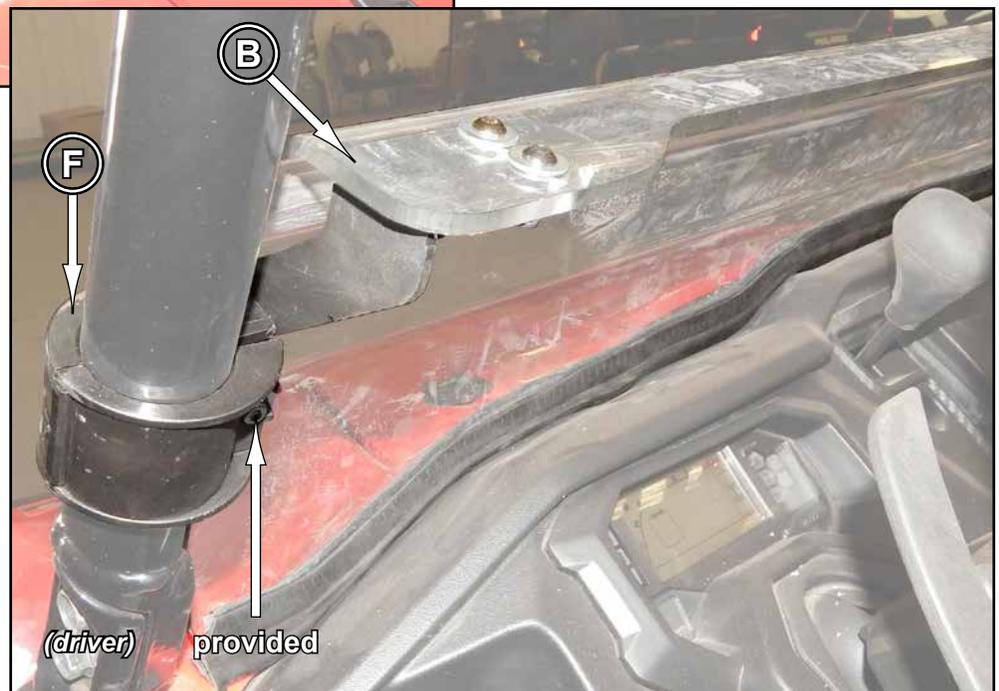


Upper Windshield (A)


- Install Pivot Blocks (E) to Upper Windshield (A) with hardware shown.
- Install Handle and Support, part of Latch Assembly (D), to Upper Windshield (A) with hardware shown.
- Repeat for opposite side.

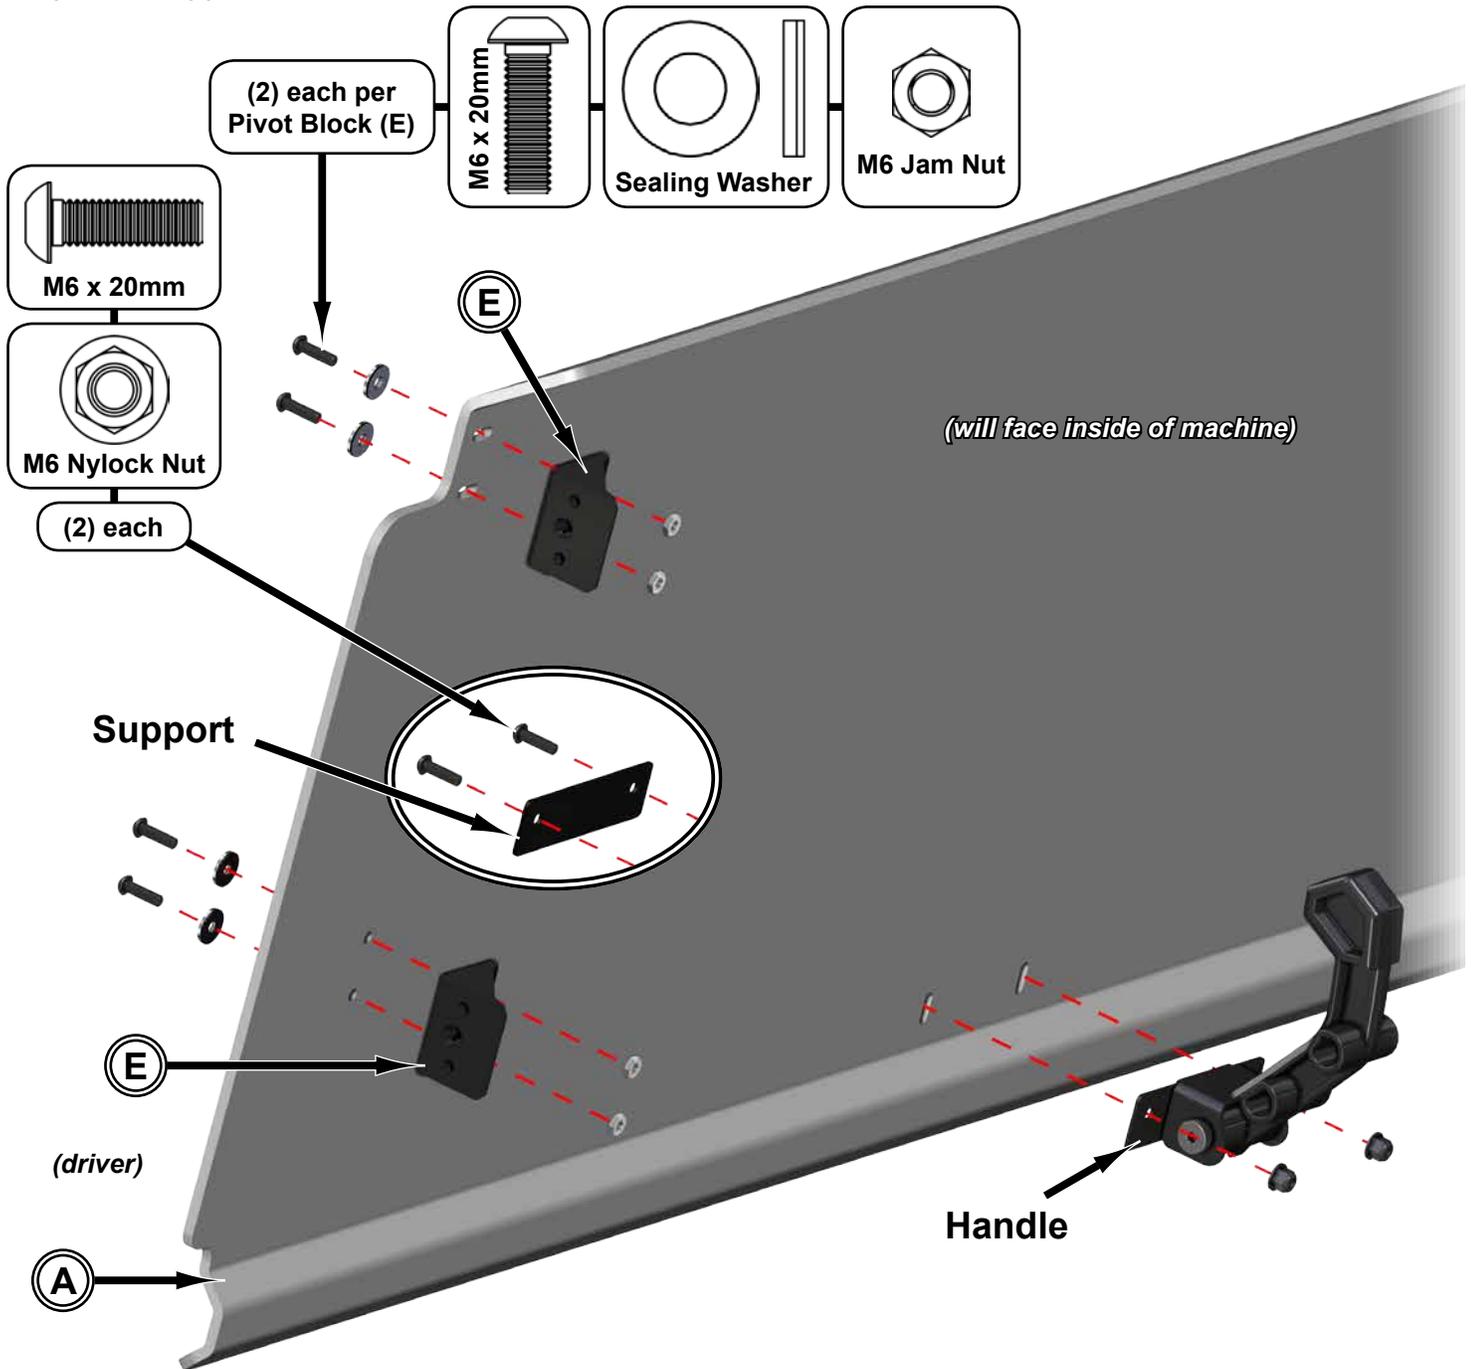



- Install Upper Support L (H) to Pivot Block (E) with hardware shown.
- Install Gas Strut (C) to Upper Support L (H) with hardware shown.
- Install Clamp (F) to Upper Support L (H) with hardware shown.
- Repeat for opposite side.

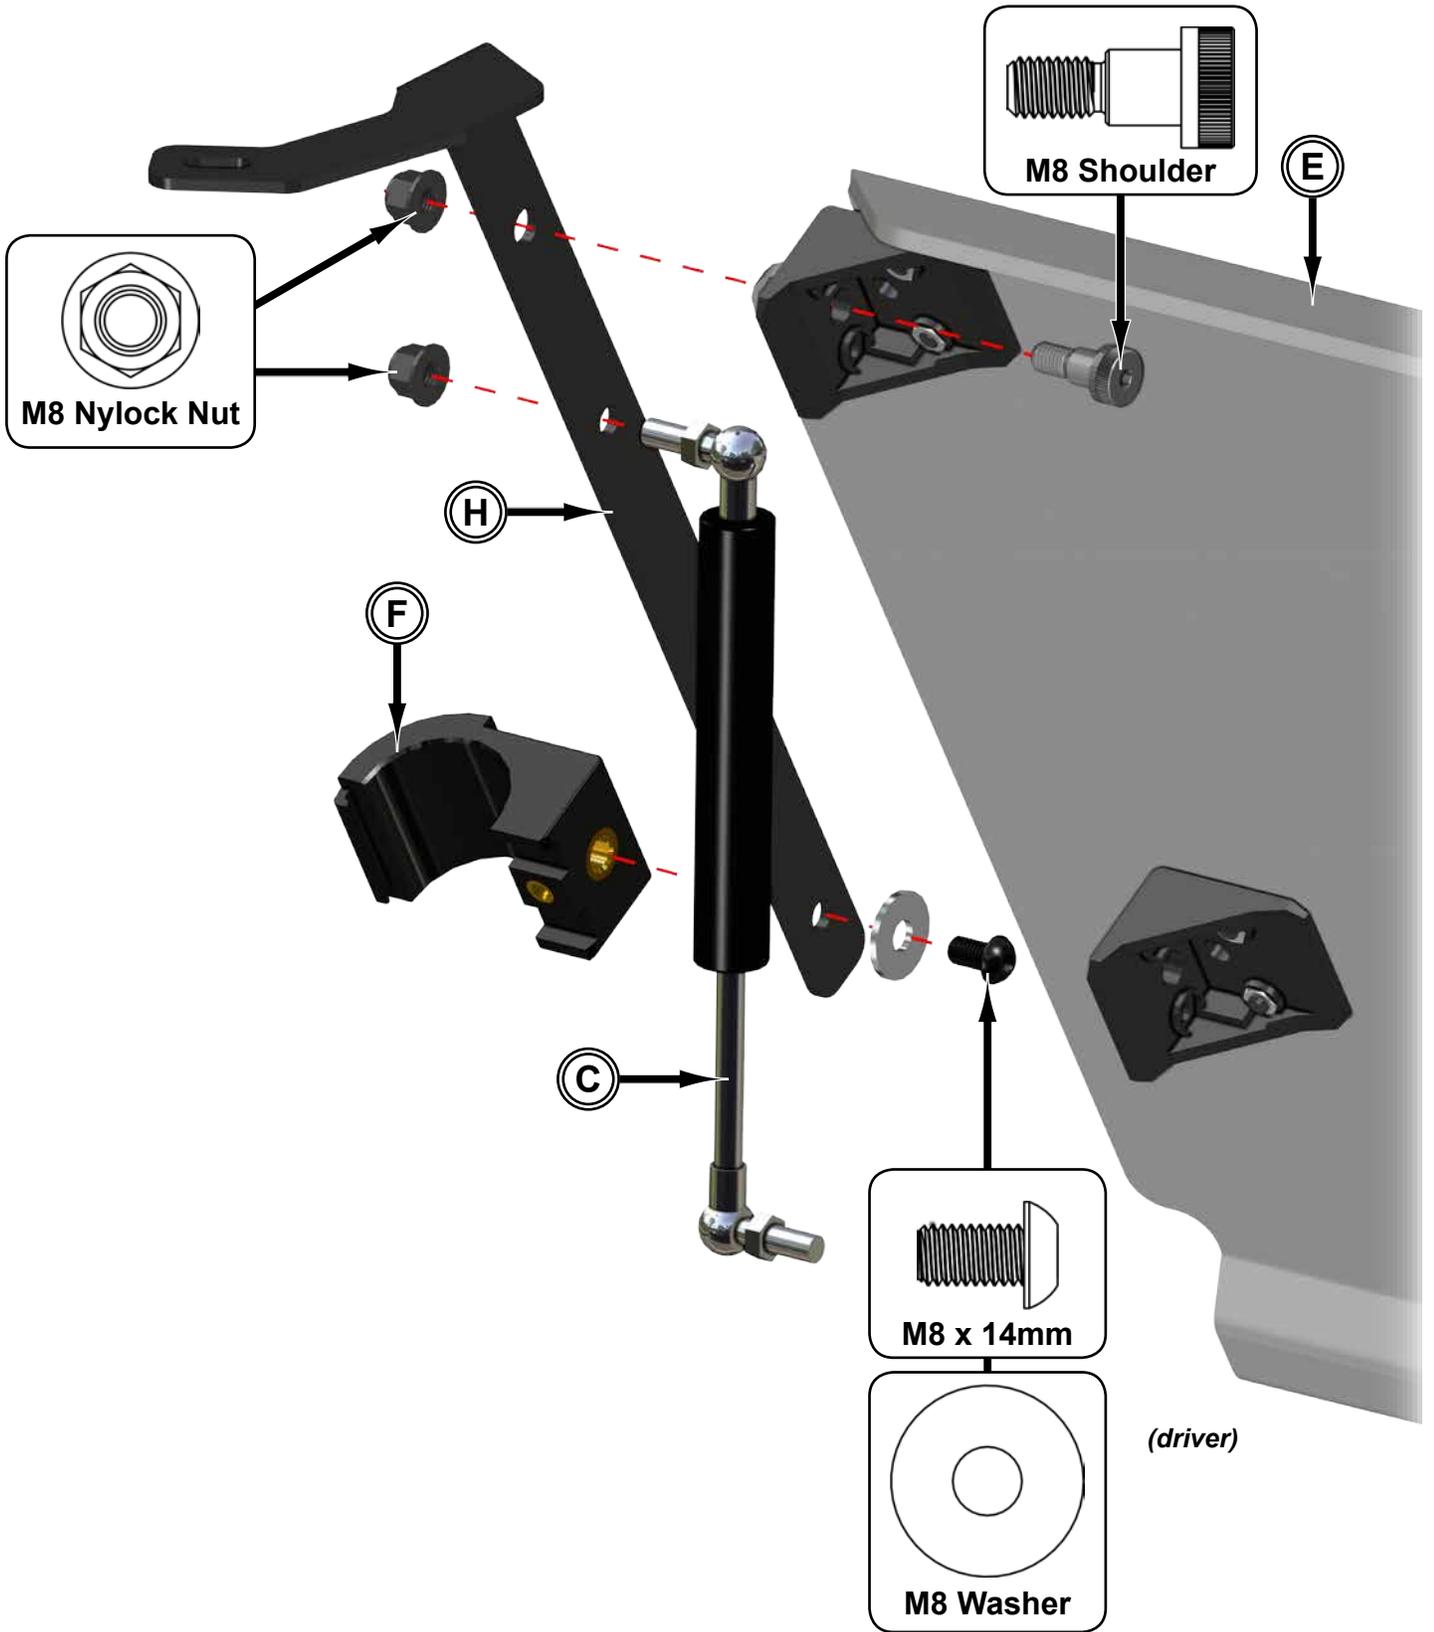

- Install Clamps (F) to Cage as shown.

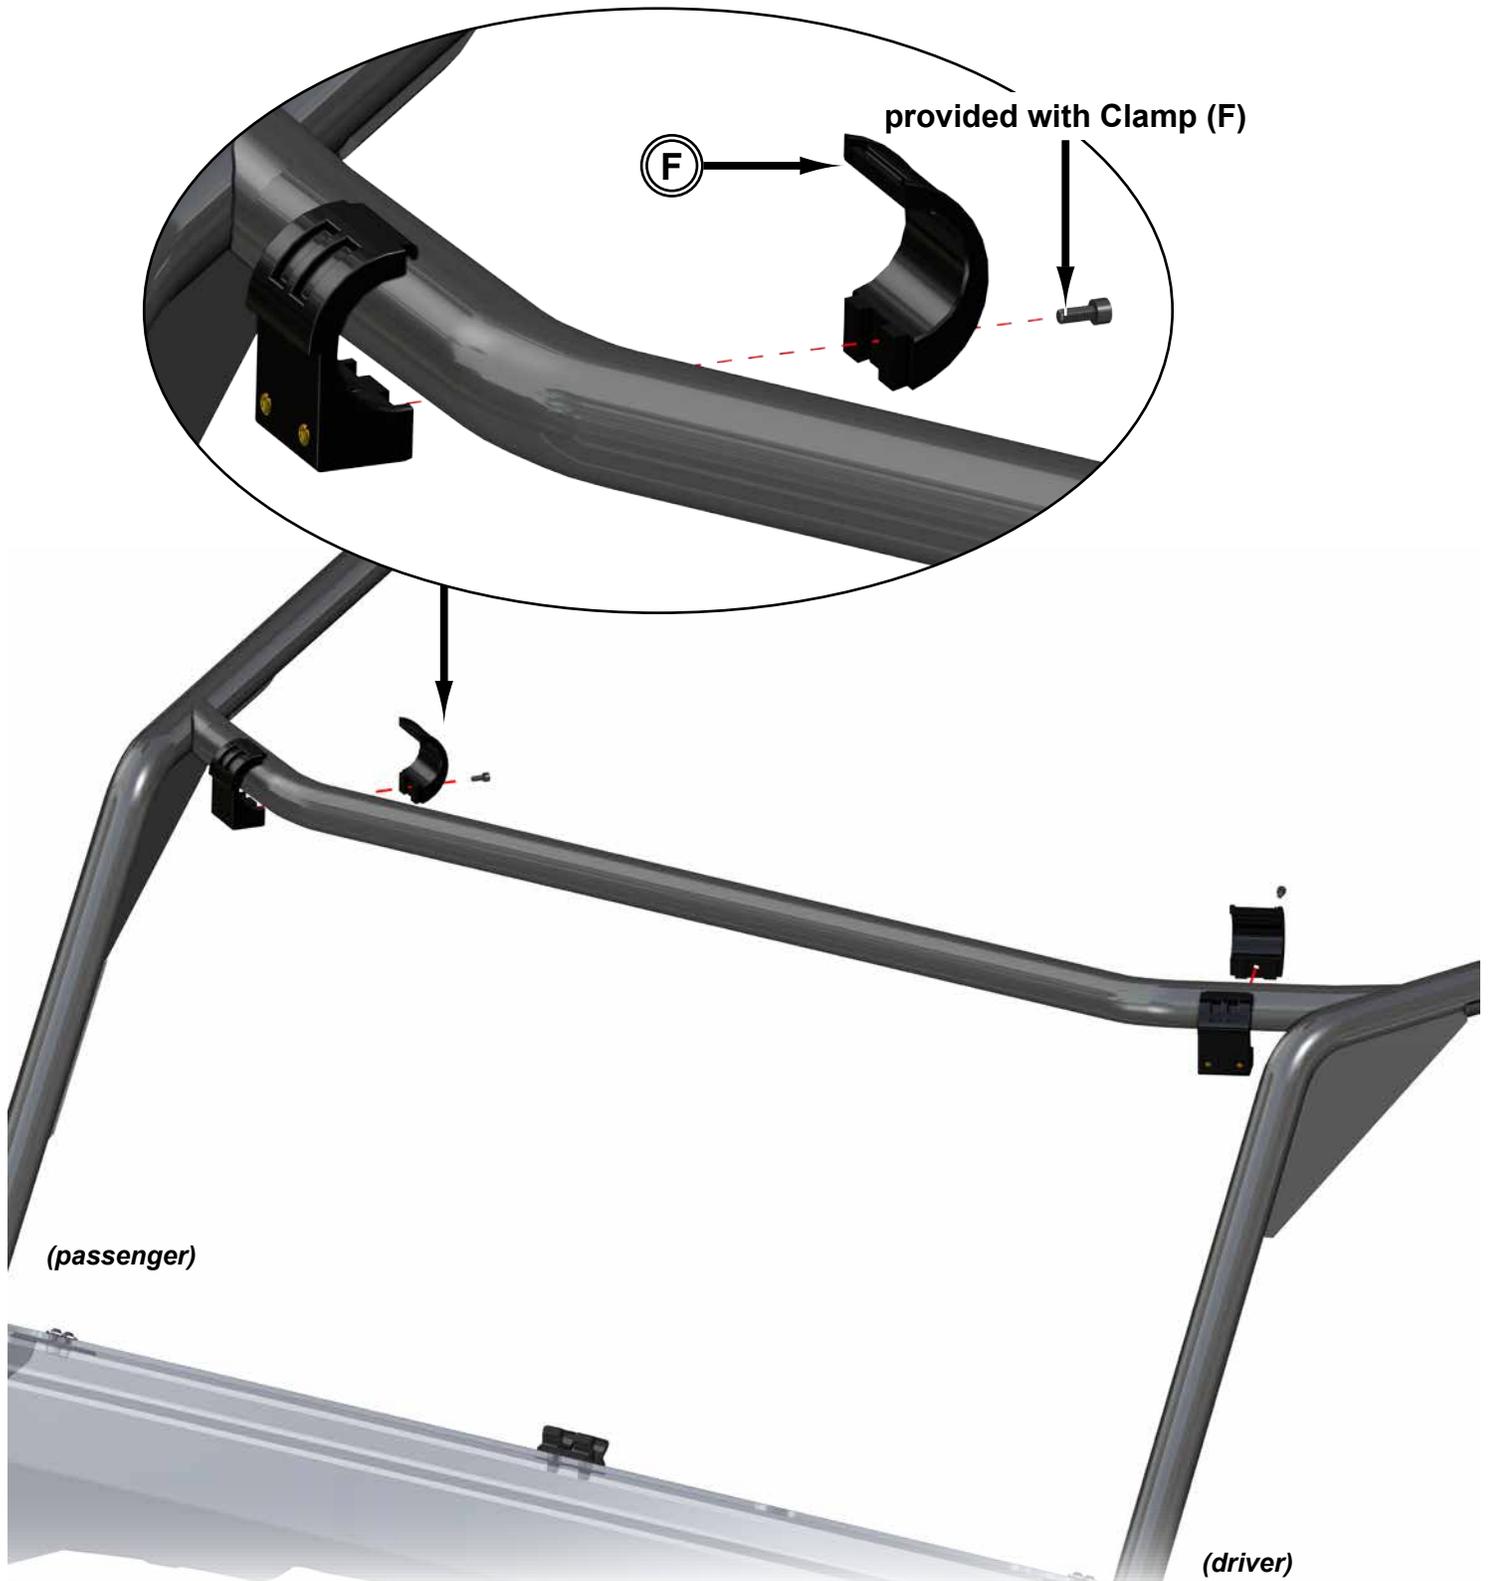

- Install Upper Supports (H-G) to Clamps (F) with hardware shown.
- Secure lower most Clamps (F) to Cage as shown.

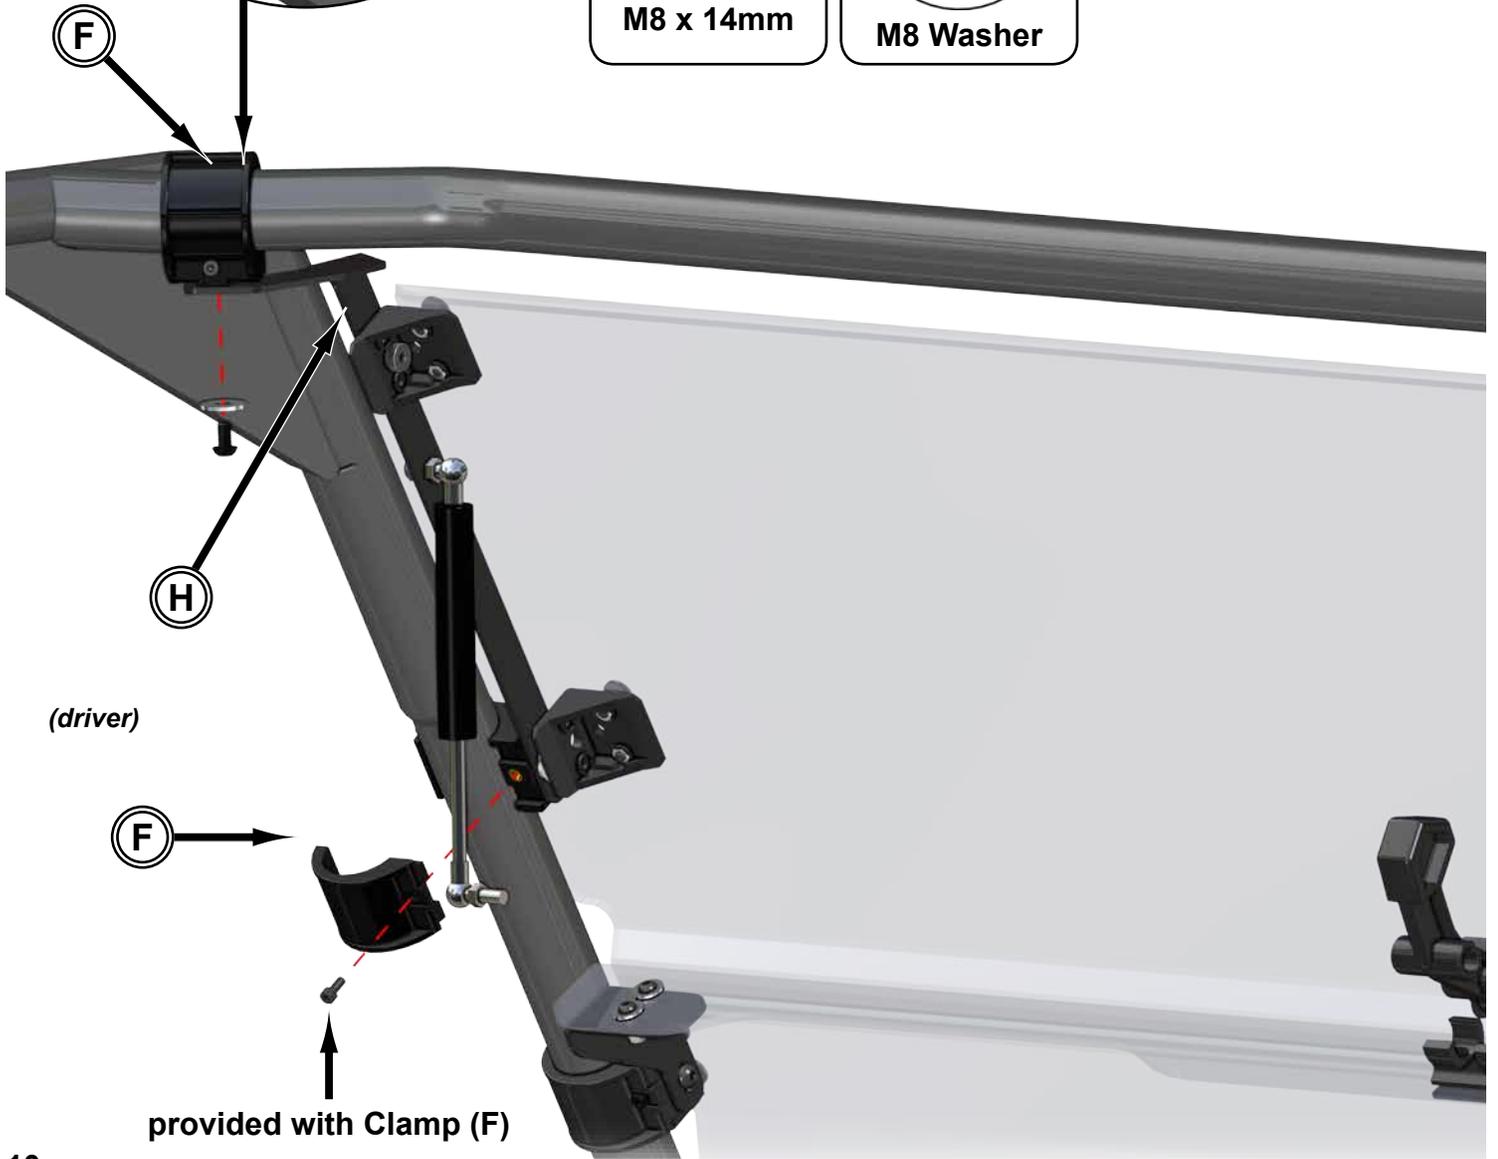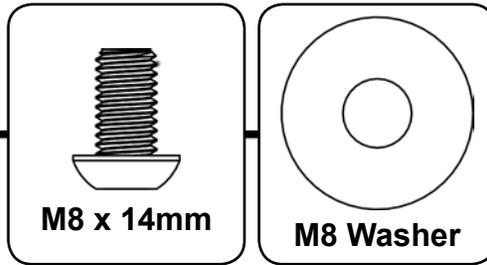

- Open Upper Windshield and secure Gas Struts (C) to Pivot Blocks (E) with hardware shown.
- Close Upper Windshield and engage Latch.
- Align Windshield assembly to machine making sure that Seal, on Lower Windshield (B), is in contact with Hood.
- Tighten hardware completely.





Seal to be in contact with Hood.

Windshield Cleaning:

- Do not use window cleaning fluids (Windex, 409, etc) or any solvents (gasoline, denatured alcohol, acetone, etc).
 - Never use abrasive cleaners, abrasive pads, or gritty cloths.
 - Never use razor blades, scrapers, squeegees, brushes, etc.
1. Thoroughly rinse Windshield to float off dirt and mud.
 2. Using a soft cloth, or microfiber cloth, clean Windshield with warm water and a gentle detergent. Baby shampoo or hand washing soap are recommended.
 3. To prevent water spots, use a chamois to blot Windshield dry.