


Item	Description	Qty
A	Flat Bracket	2
B	Formed Bracket, Right	1
C	Formed Bracket, Left	1
D	Spring Spacer	2
E	3/8"-16 x 2" Lg. HHCS	2
F	3/8" Washer	4
G	3/8"-16 Nylock Nut	2
H	Spacer	2

Installation Tools
14mm Socket
9/16" Socket
Ratchet Staps or Spring Compressor

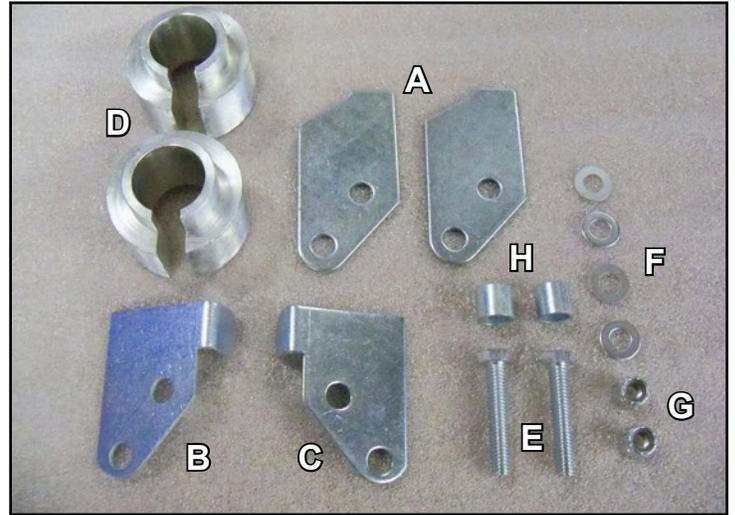


**Allow (2) Hours for installation.**

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**

 [sales@superatv.com](mailto:sales@superatv.com)  [www.superatv.com](http://www.superatv.com)

 1-812-574-7777  8:00am - 9:00pm EST M-Th  
8:00am - 7:00pm EST Friday  
9:00am - 2:00pm EST Saturday

*Thank You  
For Choosing*

#### Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.



Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

## FRONT

1. Raise ATV off ground, secure on jack stands, and remove Wheels.
2. Remove bolt securing top of Shock to Frame.
3. Install Flat Bracket (A) to inside of factory mount, toward front. Install Bolt (E), Washer (F), and Spacer (H). See Fig. 1.
4. Install Formed Bracket, Right (B) on outside of factory mount, towards rear. Secure with Washer (F) and Nut (G). See Fig. 1 and Fig. 1a.
5. Reinstall Shock into new Bracket. Secure with factory hardware.
6. Repeat for opposite side.
7. Reinstall Wheels and ensure that hardware is tightened completely.

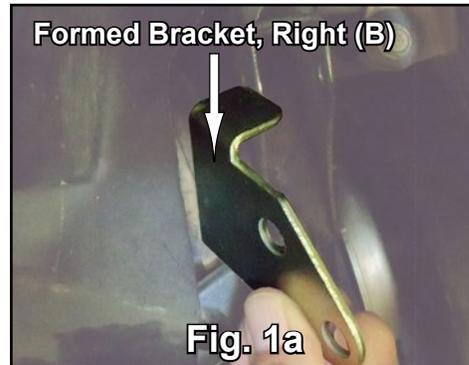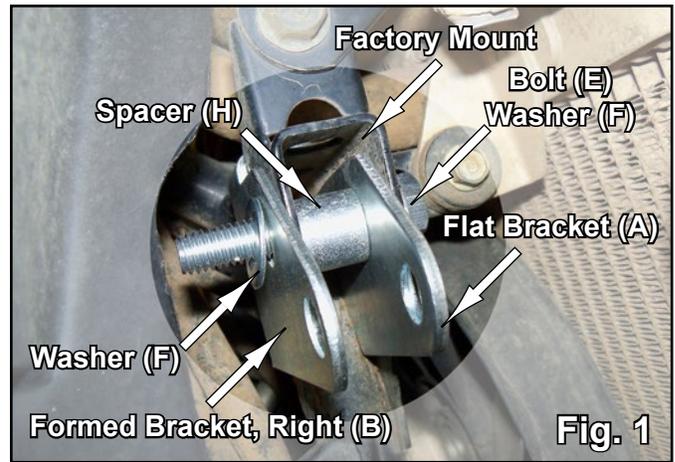

## REAR

1. Raise ATV off ground, secure on jack stands, and remove Wheels.
2. Use a Spring Compressor, or 2 to 3 Ratchet Straps, and compress Spring at top of Shock. Compress just enough to allow Spring Spacer (D) in. See Fig. 2.
3. Remove bolt securing bottom of Shock.
3. Remove and discard Plate from bottom of Spring and insert machined end of Spring Spacer (D). See Fig. 2 and Fig. 3.
4. Slowly decompress Spring to secure Spring Spacer (D) and reinstall bottom bolt to secure Shock. See Fig. 3.
5. Repeat for opposite side.
6. Reinstall Wheels and ensure that hardware is tightened completely.

