
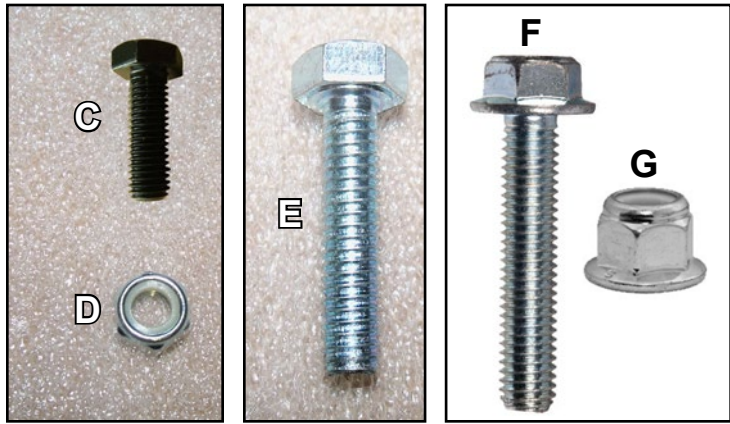


INSTALLATION INSTRUCTIONS

Polaris RangerXP, Winch Mount Plate

Item	Description	Qty
A	Winch Mount Plate	1
B	Fairlead Plate	1
C	M8-1.25 x 25mm Lg. HHCS	4
D	M8-1.25 Nylock Nuts	8
E	M8-1.25 x 30mm Lg. HHCS	4
F	M8-1.25 x 30mm Lg. FHCS	3
G	M8-1.25 Flange Head Nylock Nuts	3

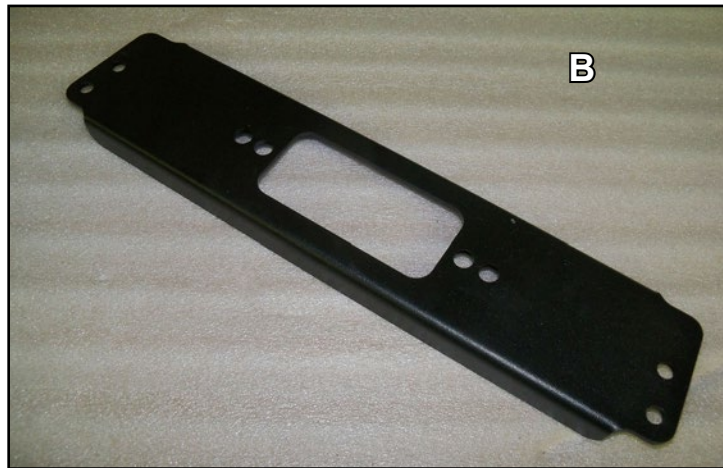

Read instructions and view illustrations before beginning.

Need help with your installation?

sales@superatv.com
www.superatv.com

1-812-574-7777
 8:00am - 9:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*

SUPERATV.COM

Liability Statement
 SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.



By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

Winch not included. Shown for illustration only.

Do not tighten hardware completely unless noted.

1. Remove Front Bumper and plastic. See Fig. 1.
2. Install Fairlead to Fairlead Plate (B).
3. Install Winch Mount Plate (A) to machine with M8-1.25 x 25mm Lg. HHCS (C), M8-1.25 Nylock Nuts (D), M8-1.25 x 30mm Lg. FHCS (F), and M8-1.25 Flange Head Nylock Nuts (G). See Fig. 2. Tighten hardware completely.
4. Install M8-1.25 Nylock Nuts into Winch. See Fig. 3.
5. Mount Winch to Winch Mount Plate (A) with M8-1.25 x 30mm Lg. HHCS (E). See Fig. 4a and Fig. 4b. Tighten hardware completely.
6. Reinstall Plastic and Front Bumper.
7. Install Fairlead Plate (A) to Winch Mount Plate (B) with M8-1.25 x 25mm Lg. HHCS (C), M8-1.25 Nylock Nuts (D), and stock hardware. See Fig. 5. Tighten hardware completely.
8. For wiring, refer to installation instructions included with Winch.

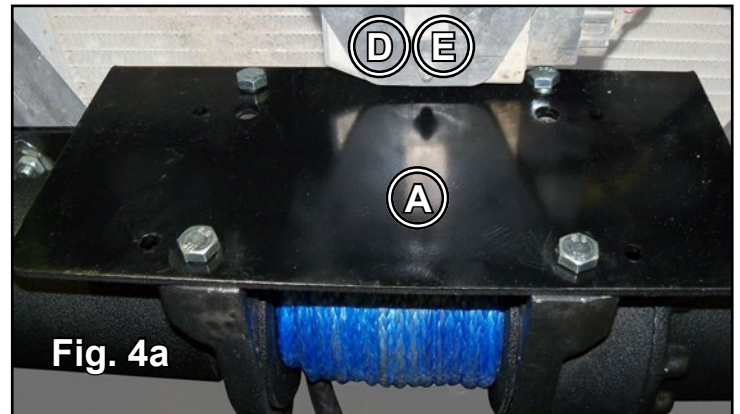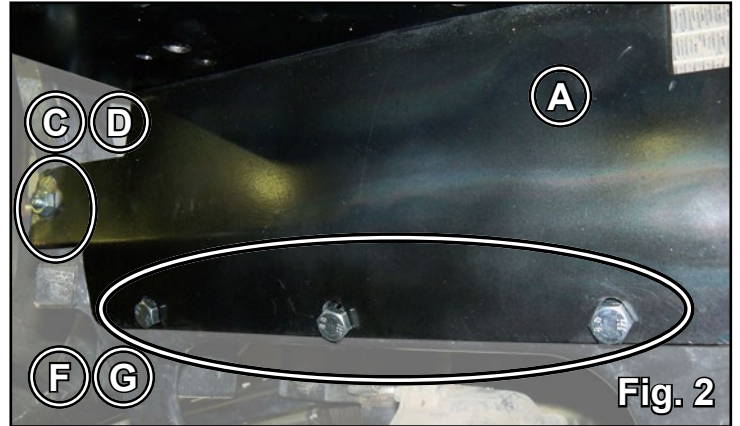

Minor interference, between Winch and Radiator Hose, may occur in some installations. Use Flex Loom or applicable material to prevent.

