


**3" Lift Kit: for Honda Pioneer 1000**

Item	Description
A	Front Bracket
B	Spring Spacer x 2
C	Rear Bracket x 2

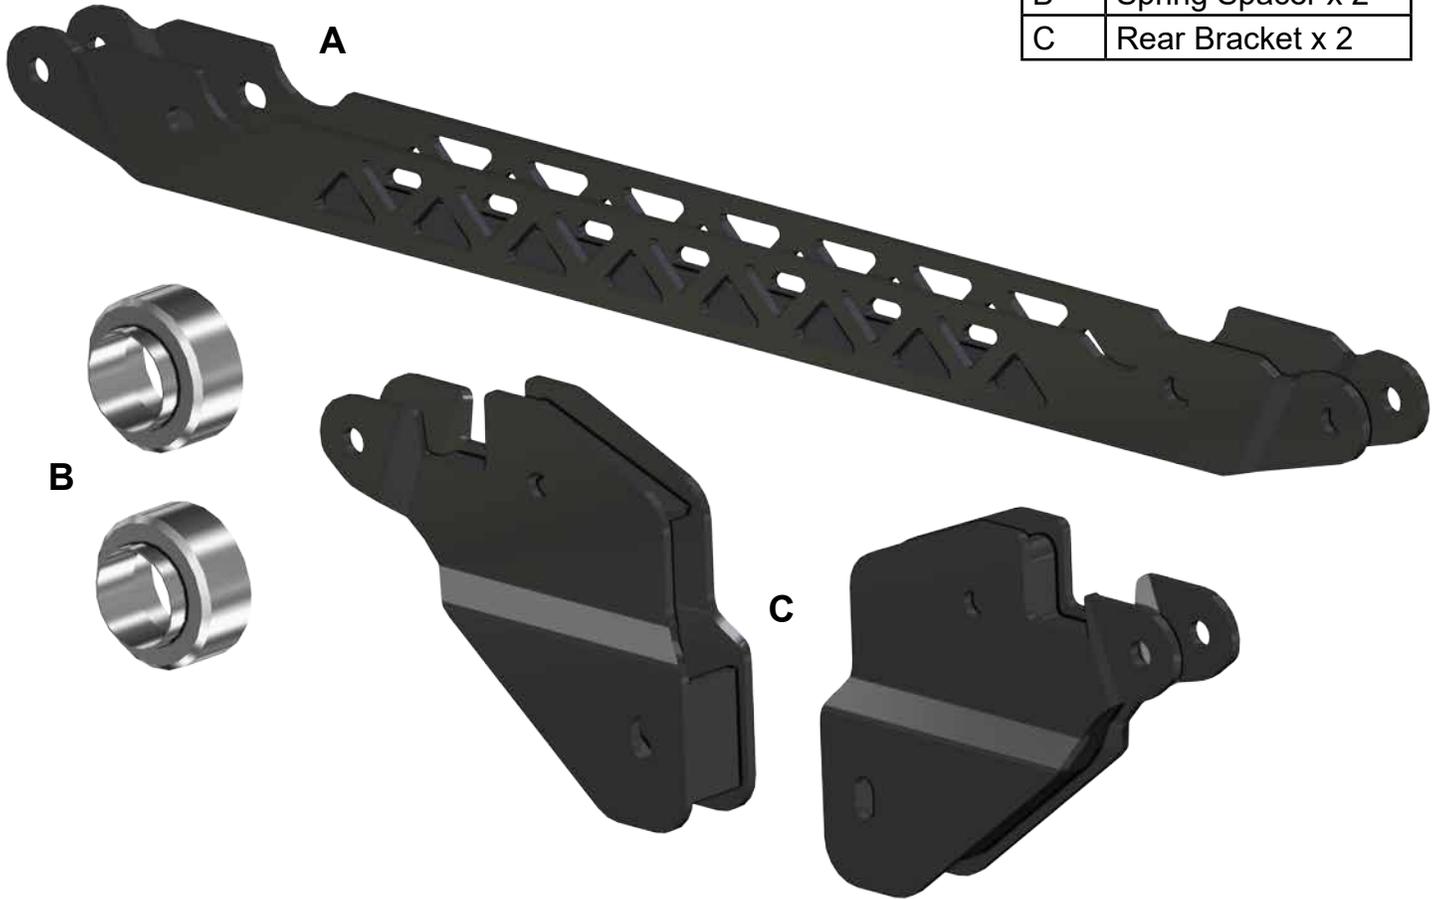

(kit contents continue on following page)

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th  
 8:00am - 7:00pm EST Friday  
 9:00am - 2:00pm EST Saturday

*Thank You  
 For Choosing*



**Liability Statement**



SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.



SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

(kit contents continued)

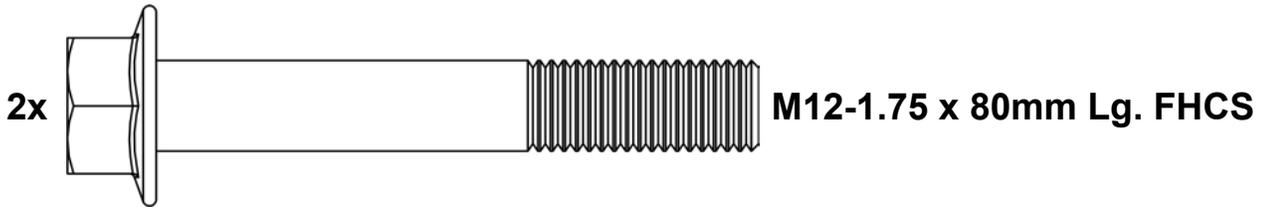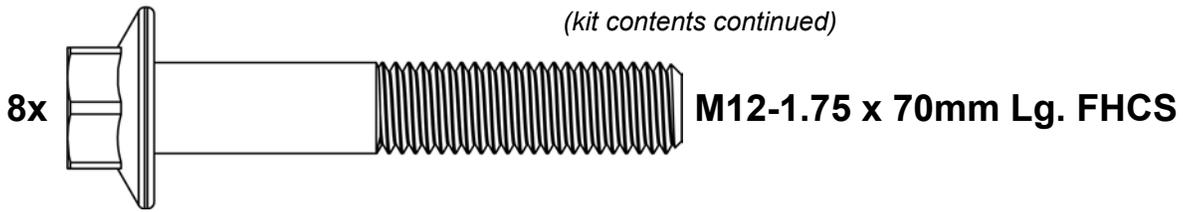


**Front:** Keep all components removed from machine.

- Raise machine off ground, secure with jack stands, remove Wheels, and remove Shocks.

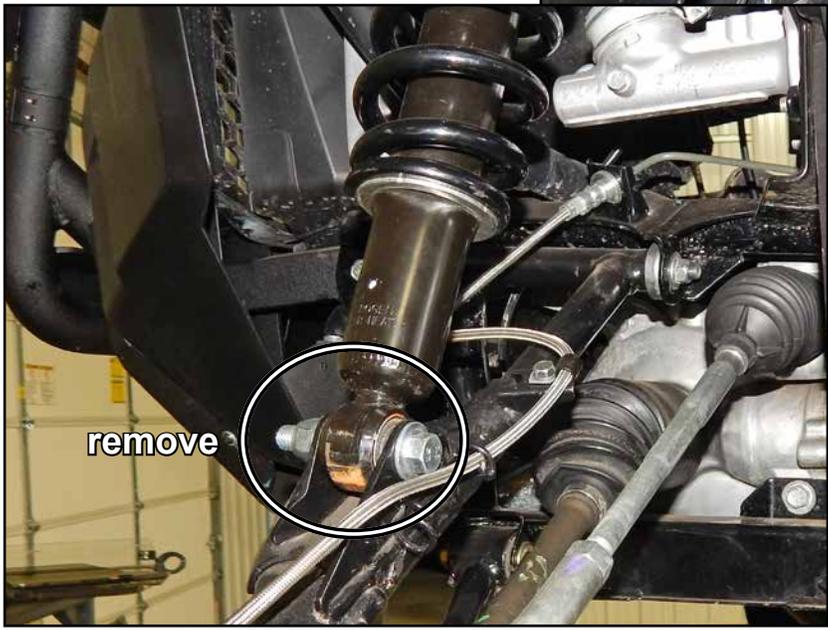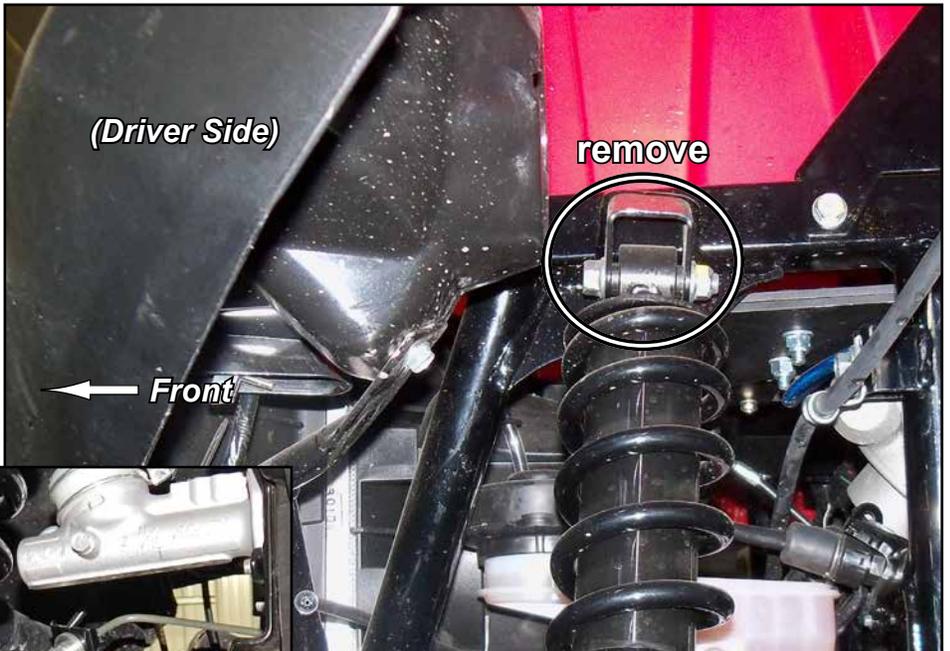


Do not tighten hardware completely unless noted.

- Install Front Bracket (A) to Shock Mount with hardware shown.
- Tighten hardware completely.

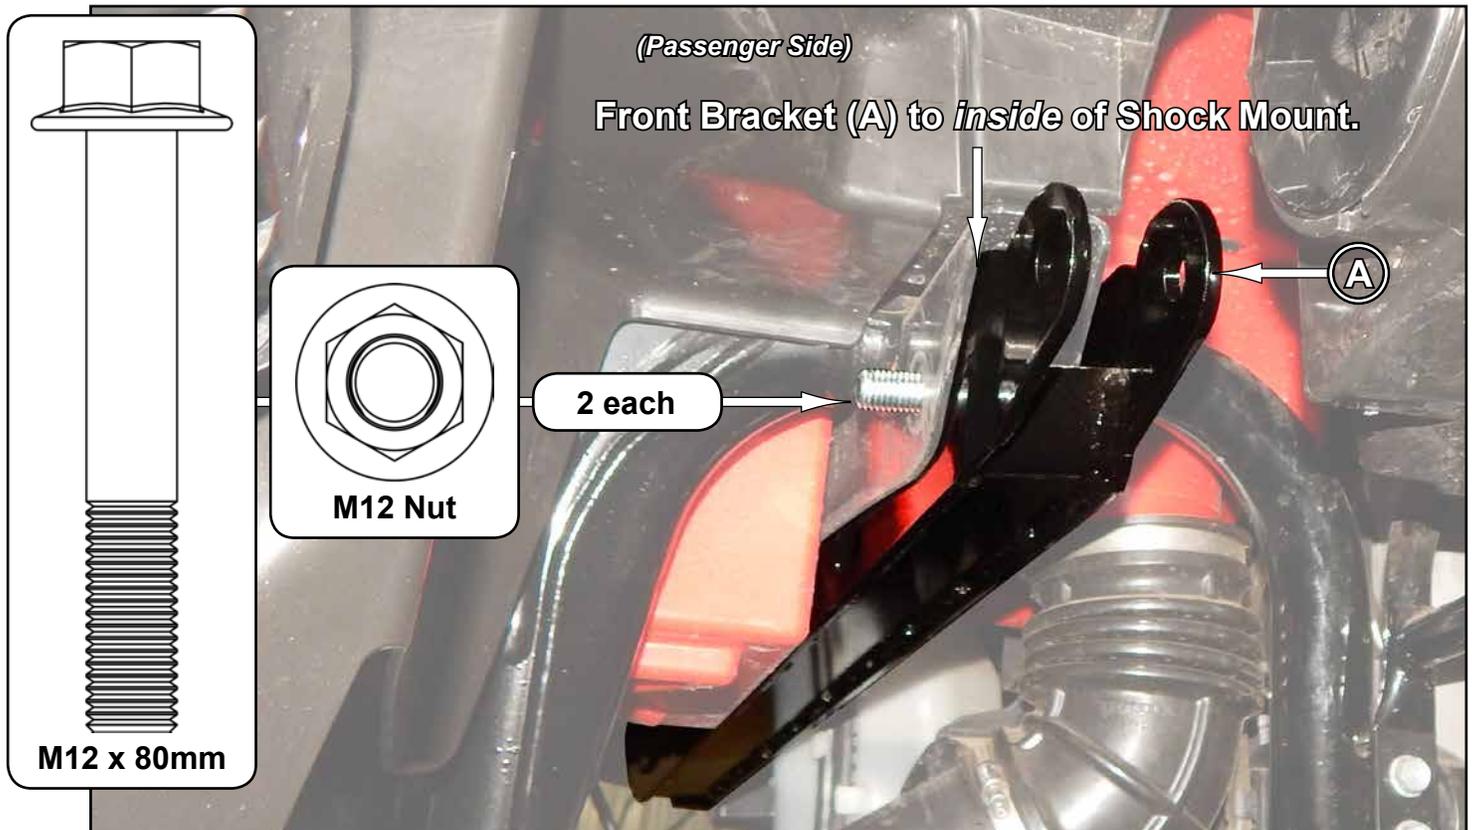

- Place Shock into Spring Compressor and remove Retainer and Spring.
- Install Spring Spacer (B) as shown and replace Spring and Retainer.
- Repeat for remaining Shock.

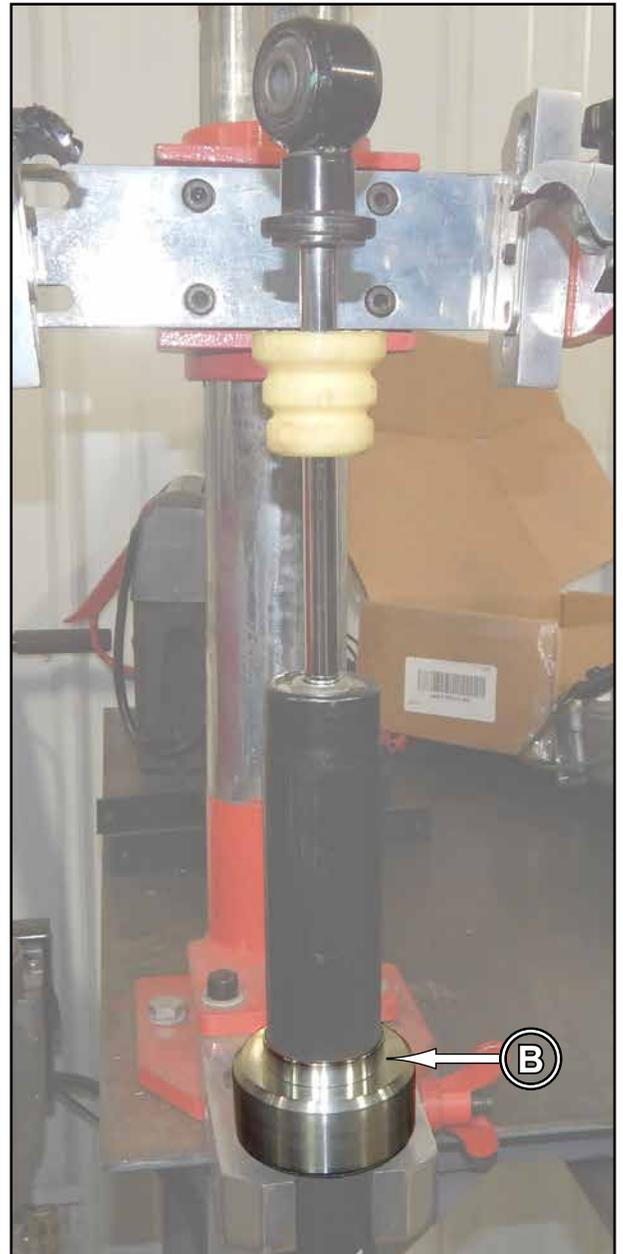

- Install Shock to Front Bracket (A) with hardware shown.
- Secure to A-Arm with stock hardware.
- Repeat for opposite Shock.



- Tighten hardware completely.



**Rear:** *Keep all components removed from machine.*

- Raise machine off ground, secure with jack stands, remove Wheels, and remove Shocks.





Do not tighten hardware completely unless noted.

- Install Rear Bracket (C) to Shock Mount with hardware shown.
- Tighten hardware completely.

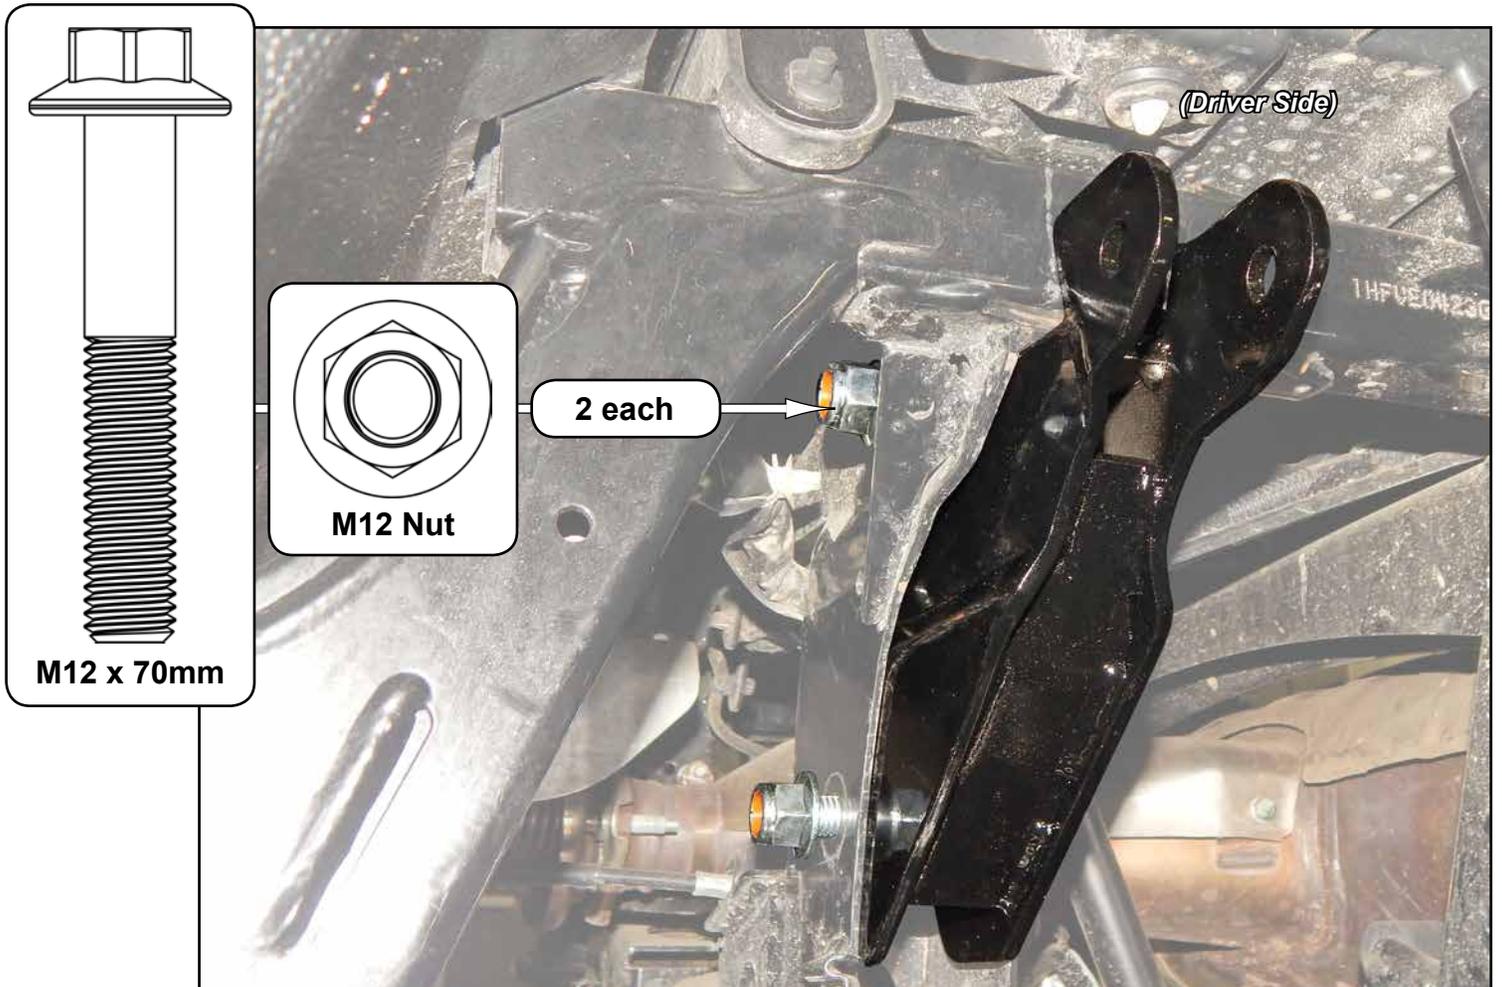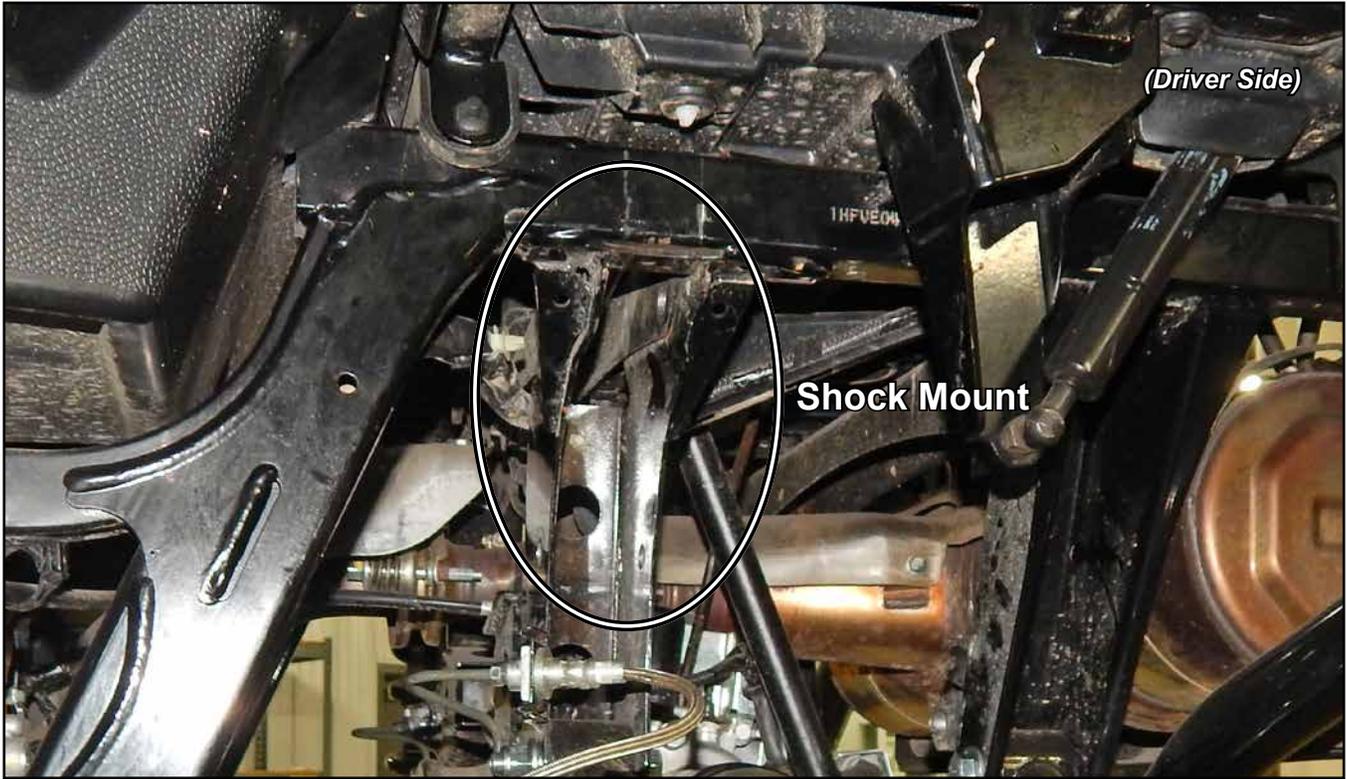

- Install Shock to Rear Bracket (C) with hardware shown.
- Secure to A-Arm with stock hardware.
- Repeat for opposite Shock.

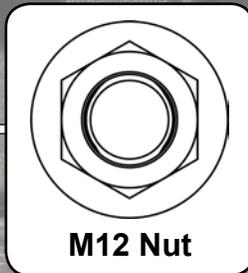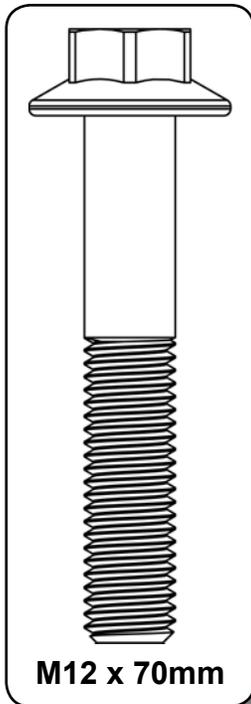

- Tighten hardware completely.