


## INSTALLATION INSTRUCTIONS

### Polaris Sportsman 550XP/850XP, 2" Lift Kit



**Rhino Brand Axles recommended with 2011 and Up models.**

Item	Description	Qty
A	Front Brackets	4
B	M10-1.5 x 60mm Lg. HHCS	2
C	M10 Flat Washers	4
D	M10-1.5 Nylock Nuts	2
E	Spacers	2
F	Rear A-Arms	2

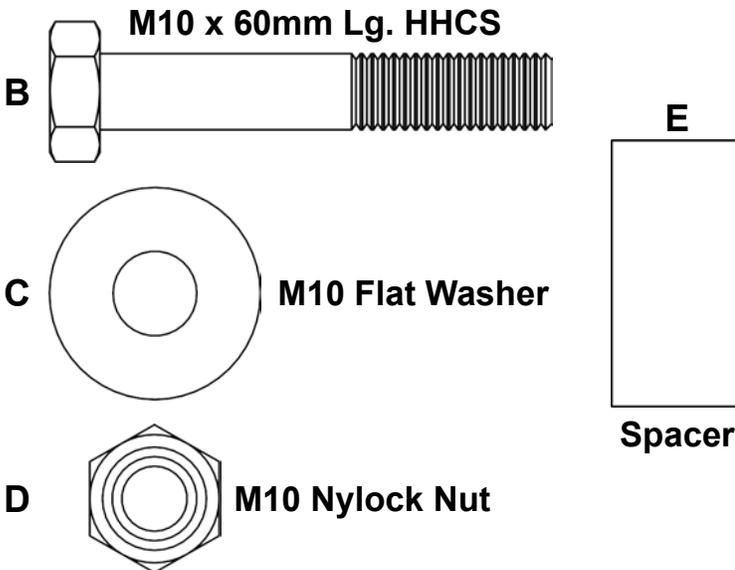

This product is designed, and manufactured, to gain additional ground clearance on utility vehicles and to be used at slower speeds on level terrains. Installation of this product increases angle of Axles which may result in frequency of required maintenance and parts wear. It is recommend that wider Tires or Wheel Spacers be used, in conjunction, with this kit to improve stability.

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th  
8:00am - 7:00pm EST Friday  
9:00am - 2:00pm EST Saturday

*Thank You  
For Choosing*

# SUPERATV.COM

#### Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

*Do not tighten hardware completely unless noted. Keep all stock hardware removed from machine.*

1. Raise **front** of machine off ground, secure on jack stands, and remove Wheels.
2. Remove lower Shocks from factory mount.
3. Install Front Brackets (A) with M10-1.5 x 60mm Lg. HHCS (B), Spacers (E), M10 Flat Washers (C), and M10-1.5 Nylock Nuts (D). See Figs. 1 - 1a.
4. Reinstall Shocks to Front Brackets (A) with stock hardware. See Figs. 1 - 1a.
5. Tighten all hardware completely and reinstall Wheels.
6. Raise **rear** of machine off ground and secure with jack stands.
7. Unhook Sway Bar, remove Brake Line Clips, and remove Shocks from Lower A-Arms. Remove Lower A-Arms.
8. Transfer Bushings and Zerk Grease Fittings from stock Lower A-Arms to Rear A-Arms (F).
9. Install Rear A-Arms (F) to machine with stock hardware. See Figs. 2 - 2a.
10. Use pre-drilled and tapped holes to reinstall Brake Line Clips into Rear A-Arms (F). See Fig. 2a.
11. Reinstall Shocks to Rear Brackets (B) with stock hardware. See Fig. 2a.
12. Reinstall Sway Bar to Rear Brackets (B). Reuse stock Bushings.
13. Tighten all hardware completely and reinstall Wheels.

