


INSTALLATION INSTRUCTIONS

Polaris, EZ Install, 2" Lift Kit (Front Only)

Item	Description	Qty
A	Adapters	2
B	Adapter Screws	2

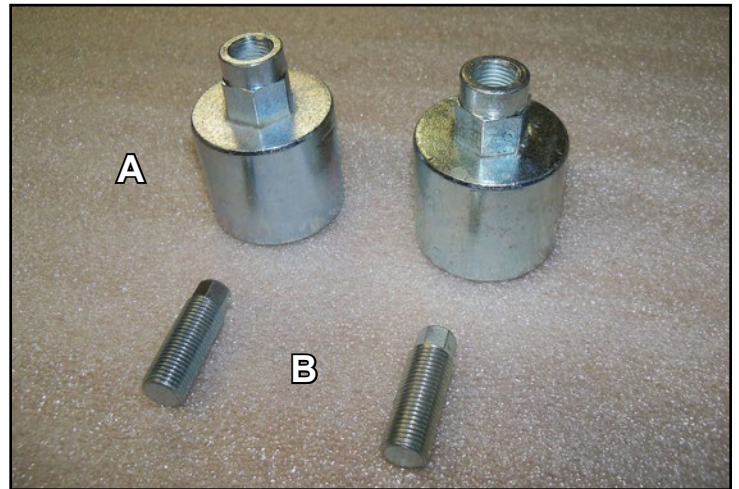

This product is designed, and manufactured, to gain additional ground clearance on utility vehicles and to be used at slower speeds on level terrains. Installation of this product increases angle of Axles which may result in frequency of required maintenance and parts wear. It is recommend that wider Tires or Wheel Spacers be used, in conjunction, with this kit to improve stability.

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You
For Choosing

SUPERATV.COM

Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

(Installation on Polaris Sportsman shown)

Model Years 2004 or older, start with Step 5.

Do not tighten hardware completely unless noted.
Keep all hardware for reuse.

1. Remove front box.
2. Remove (4) Center Bolts of Rack. See Fig. 1.
3. Remove (4) Star Screws from bottom of Rack. See Fig. 2.
4. Remove (4) Star Screws from top of Rack. See Fig. 3; Remove Rack.
5. Raise front of machine off ground. Do not raise to high (2" is recommended) as some Axles, on certain models, can come out of Lower CV Joints.
6. Remove Hex Locknut, Washer, and plastic Bearing from top of Strut assembly. Pull top of Strut from Frame.
7. Remove round plastic Bearing from top of strut and screw on Adapter (A). Tighten. See Fig. 4.
8. Place round plastic Bearing back on top of Adapter (A) and place Strut assembly into Frame. Install Adapter Screw (B). Tighten. See Fig. 4.
9. Repeat steps for opposite side.
10. Reinstall components removed in Step 6.
11. Cut a notch in Wheel Well Panels for Brake Line clearance. See Fig. 5.

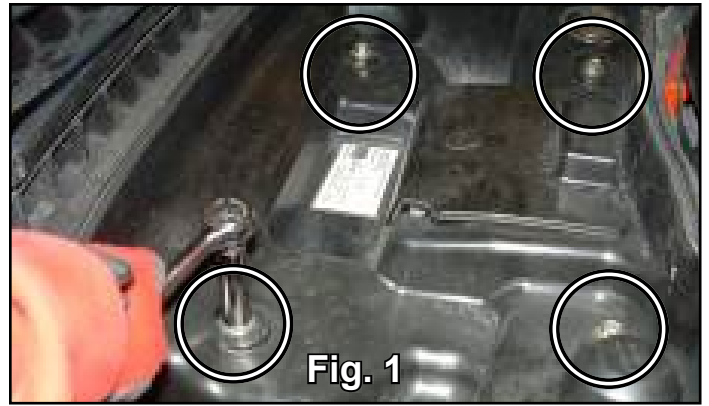


Fig. 1

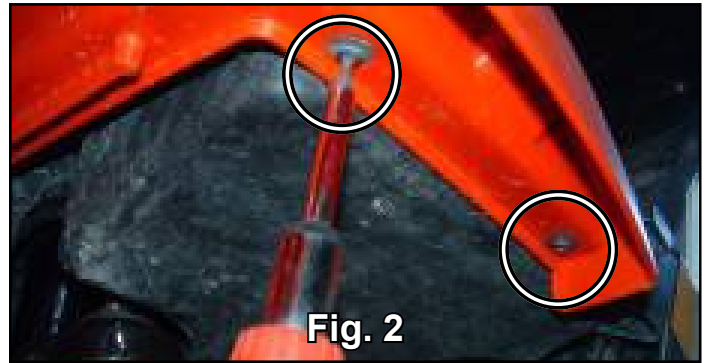


Fig. 2

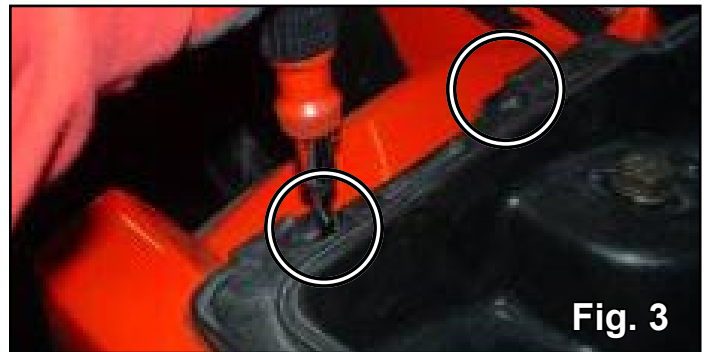


Fig. 3

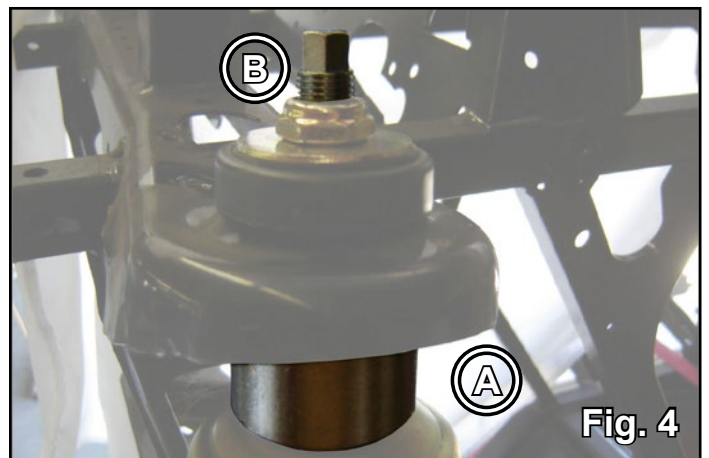


Fig. 4

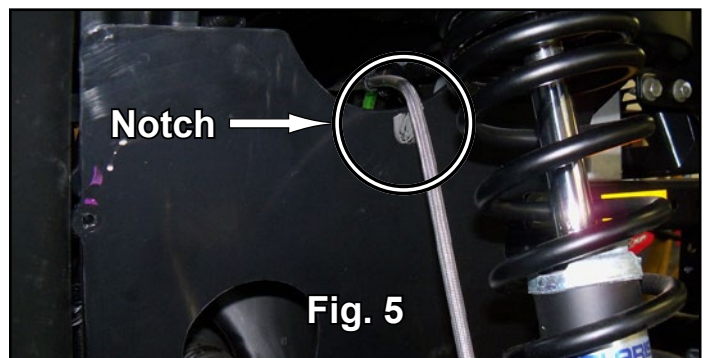


Fig. 5